

Архангельск (8182)63-90-72  
Астана (7172)727-132  
Астрахань (8512)99-46-04  
Барнаул (3852)73-04-60  
Белгород (4722)40-23-64  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06  
Ижевск (3412)26-03-58  
Казань (843)206-01-48  
Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04  
Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12  
Новокузнецк (3843)20-46-81  
Новосибирск (383)227-86-73  
Омск (3812)21-46-40  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16

Пермь (342)205-81-47  
Ростов-на-Дону (863)308-18-15  
Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Севастополь (8692)22-31-93  
Симферополь (3652)67-13-56  
Смоленск (4812)29-41-54  
Сочи (862)225-72-31  
Ставрополь (8652)20-65-13

Сургут (3462)77-98-35  
Тверь (4822)63-31-35  
Томск (3822)98-41-53  
Тула (4872)74-02-29  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Уфа (347)229-48-12  
Хабаровск (4212)92-98-04  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47    Казахстан (772)734-952-31    Таджикистан (992)427-82-92-69

[www.ingersollrand.nt-rt.ru](http://www.ingersollrand.nt-rt.ru) || [idm@nt-rt.ru](mailto:idm@nt-rt.ru)

# Поршневые компрессоры

## Техническое описание



Two-stage Electric-powered – Value Package									
Model	hp	Tank Size/ Configuration	Stationary or Portable	Capacity (cfm) @ 175 psig	Max Pressure (psig)	Dimensions (L x W x H in)	Net Weight (lbs)	Tank Outlet (in)	Startup Kit
2340L5-V	5.0	60-Gal. Vertical	S	14.0	175	48 x 40 x 76	435	0.50	32305880
2340N5-V	5.0	80-Gal. Vertical	S	14.0	175	48 x 40 x 76	505	0.50	32305880
2475N5-V	5.0	80-Gal. Vertical	S	16.8	175	48 x 40 x 76	505	0.75	32305880
2475N7.5-V	7.5	80-Gal. Vertical	S	24.0	175	48 x 40 x 76	611	0.75	32305880
2545E10-V	10.0	120-Gal. Horizontal	S	35.0	175	83 x 36 x 65	920	0.75	32305898
2545K10-V	10.0	120-Gal. Vertical	S	35.0	175	51 x 46 x 83	1,104	1.00	32305898
7100E15-V	15.0	120-Gal. Horizontal	S	50.0	175	83 x 36 x 65	1,239	0.75	32305898

Available voltages: 230/1/60 (5-7.5 hp only), 200/3/60, 230/3/60, 460/3/60 and 575/3/60 voltages

Packages include magnetic starter (except 2340 models with single-phase voltage), manual drain, automatic start/stop control with pressure switch

Two-stage Electric-powered – Value Plus Package									
Model	hp	Tank Size/ Configuration	Stationary or Portable	Capacity (cfm) @ 175 psig	Max Pressure (psig)	Dimensions (L x W x H in)	Net Weight (lbs)	Tank Outlet (in)	Startup Kit
2545E10-VP	10.0	120-Gal. Horizontal	S	35.0	175	83 x 36 x 65	1,104	0.75	32305898
2545K10-VP	10.0	120-Gal. Vertical	S	35.0	175	51 x 46 x 83	1,104	1.00	32305898
7100E15-VP	15.0	120-Gal. Horizontal	S	50.0	175	83 x 36 x 65	1,297	0.75	32305898

Available voltages: 200/3/60, 230/3/60, 460/3/60 and 575/3/60 voltages

Packages include magnetic starter, electric drain, Automatic start/stop control with pressure switch, air-cooled aftercooler

Two-stage Electric-powered – Premium Package									
Model	hp	Tank Size/ Configuration	Stationary or Portable	Capacity (cfm) @ 175 psig	Max Pressure (psig)	Dimensions (L x W x H in)	Net Weight (lbs)	Tank Outlet (in)	Startup Kit
2475N5-P	5.0	80-Gal. Vertical	S	16.8	175	48 x 40 x 76	597	0.75	32305880
2475N7.5-P	7.5	80-Gal. Vertical	S	24.0	175	48 x 40 x 76	611	0.75	32305880
2545E10-P	10.0	120-Gal. Horizontal	S	35.0	175	83 x 36 x 65	1,104	0.75	32305898
2545K10-P	10.0	120-Gal. Vertical	S	35.0	175	51 x 46 x 83	1,104	1.00	32305898
7100E15-P	15.0	120-Gal. Horizontal	S	50.0	175	83 x 36 x 65	1,297	0.75	32305898

Available voltages: 230/1/60 (5-7.5 hp only), 200/3/60, 230/3/60, 460/3/60 and 575/3/60 voltages

Packages include magnetic starter, electric drain, automatic start/stop control with pressure switch (5 hp & 7.5hp), dual control with centrifugal unloader (10hp & 15hp), air-cooled aftercooler, low oil level switch

Single-stage Electric-powered									
Model	hp	Tank Size/ Configuration	Stationary or Portable	Capacity (cfm) @ 90 psig	Max Pressure (psig)	Dimensions (L x W x H in)	Net Weight (lbs)	Tank Outlet (in)	Startup Kit
P11U-A9	2.0	4-Gal. Twin	P	4.30	135	19 x 19 x 19	77	0.25	-
P1.5IU-A9	2.0	20-Gal. Vertical	P	5.20	135	22 x 23 x 43	200	0.25	-
SS3J2-WB	2.0	8-Gal. Twin	P	5.70	135	43 x 18 x 25	175	0.25	97338099
SS3J3-WB	3.0	8-Gal. Twin	P	11.3	135	43 x 18 x 25	175	0.25	97338099
SS3L3	3.0	60-Gal. Vertical	S	11.3	135	20 x 23 x 66	300	0.50	97338099
SS5L5	5.0	60-Gal. Vertical	S	18.1	135	20 x 30 x 71	310	0.50	20100251

Available voltages: 120/1/60 (P11U-A9), 115/1/60 (P1.5IU-A9), and 230/1/60 (SS3, SS5) voltages

Two-stage Gas-powered										
Model	hp	Engine	Tank Size/ Configuration	Stationary or Portable	Capacity (cfm) @ 175 psig	Max Pressure (psig)	Dimensions (L x W x H in)	Net Weight (lbs)	Tank Outlet (in)	Startup Kit
2475F13GH	13	Honda	30-Gal. Horizontal	P	25.0	175	51 x 33 x 44	469	0.50	32312936
2475X13GH	13	Honda	Baseplate Mounted	P	25.0	175	33 x 36 x 36	440	0.50	32312936
2475F12.5G	13	Kohler	30-Gal. Horizontal	P	24.0	175	51 x 33 x 44	469	0.50	32305872
2475X12.5G	13	Kohler	Baseplate Mounted	P	24.0	175	33 x 36 x 36	440	0.50	32305872

Single-stage Gas-powered										
Model	hp	Engine	Tank Size/ Configuration	Stationary or Portable	Capacity (cfm) @ 90 psig	Max Pressure (psig)	Dimensions (L x W x H in)	Net Weight (lbs)	Tank Outlet (in)	Startup Kit
SS3J5.5GH-WB	5.5	Honda	8-Gal. Twin	P	11.8	135	43 x 18 x 26	175	0.25	97339501

Архангельск (8182)63-90-72  
Астана (7172)727-132  
Астрахань (8512)99-46-04  
Барнаул (3852)73-04-60  
Белгород (4722)40-23-64  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06  
Ижевск (3412)26-03-58  
Казань (843)206-01-48  
Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04  
Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12  
Новокузнецк (3843)20-46-81  
Новосибирск (383)227-86-73  
Омск (3812)21-46-40  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16

Пермь (342)205-81-47  
Ростов-на-Дону (863)308-18-15  
Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Севастополь (8692)22-31-93  
Симферополь (3652)67-13-56  
Смоленск (4812)29-41-54  
Сочи (862)225-72-31  
Ставрополь (8652)20-65-13

Сургут (3462)77-98-35  
Тверь (4822)63-31-35  
Томск (3822)98-41-53  
Тула (4872)74-02-29  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Уфа (347)229-48-12  
Хабаровск (4212)92-98-04  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47    Казахстан (772)734-952-31    Таджикистан (992)427-82-92-69

[www.ingersollrand.nt-rt.ru](http://www.ingersollrand.nt-rt.ru) || [idm@nt-rt.ru](mailto:idm@nt-rt.ru)